4 Alignments and Adjustments

4-1 General Alignment Instuction

1. Usually, a color TV-VCR needs only slight touch-up adjustment upon installation.
   Check the basic characteristics such as height, horizontal and vertical sync.
2. Use the specified test equipment or its equivalent.
3. Correct impedance matching is essential.
4. Avoid overload. Excessive signal from a sweep generator might overload the front-end of the TV.
   When inserting signal markers, do not allow the marker generator to distort test result.
5. Connect the TV only to an DC power source with voltage and frequency as specified on
   the backcover nameplate.
6. Do not attempt to connect or disconnect any wire while the TV is turned on.
   Make sure that the power cord is disconnected before replacing any parts.
7. To protect aganist shock hazard, use an isolation transform.

4-2 Factory Mode Adjustments

4-2-1 Entering Factory Mode

1. To enter “Service Mode” Press the remote -control keys in this sequence :
   - If you do not have Factory remote - control

   - If you have Factory remote - control

4-2-2 Factory Mode Tree

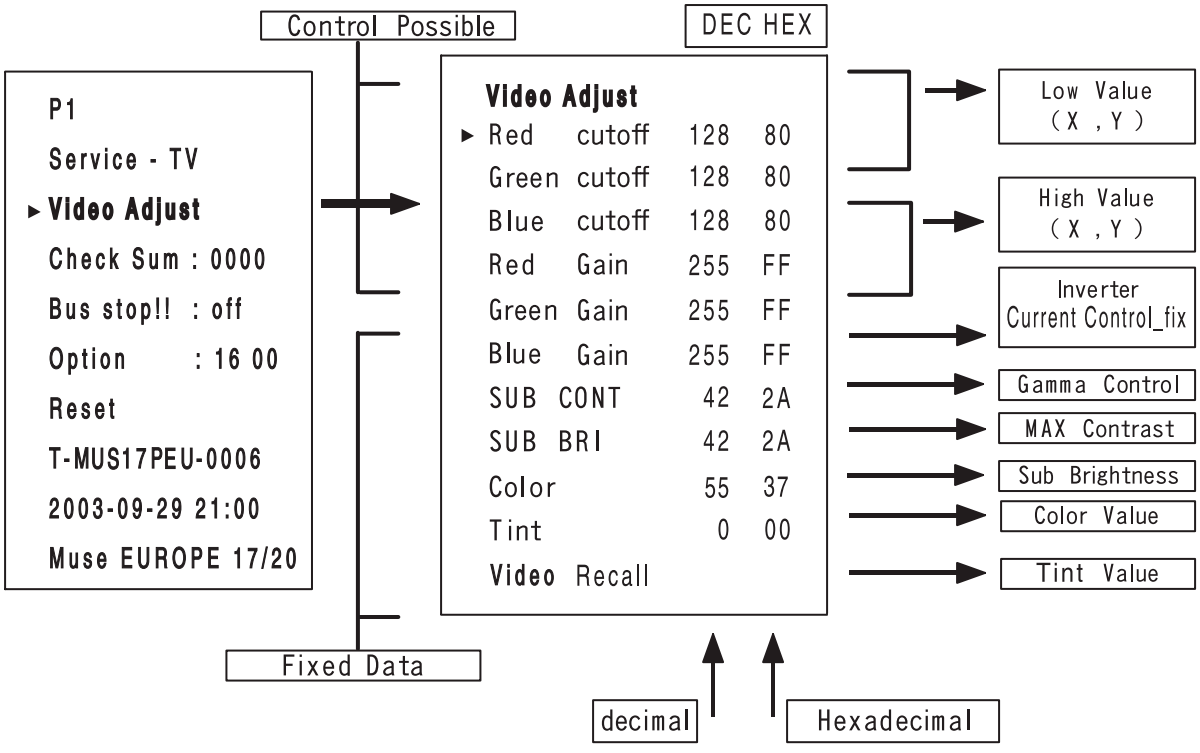

	RF	Component
CONT	42 2A	43 2B
BRI	42 2A	47 2F
COLOR	55 37	55 37

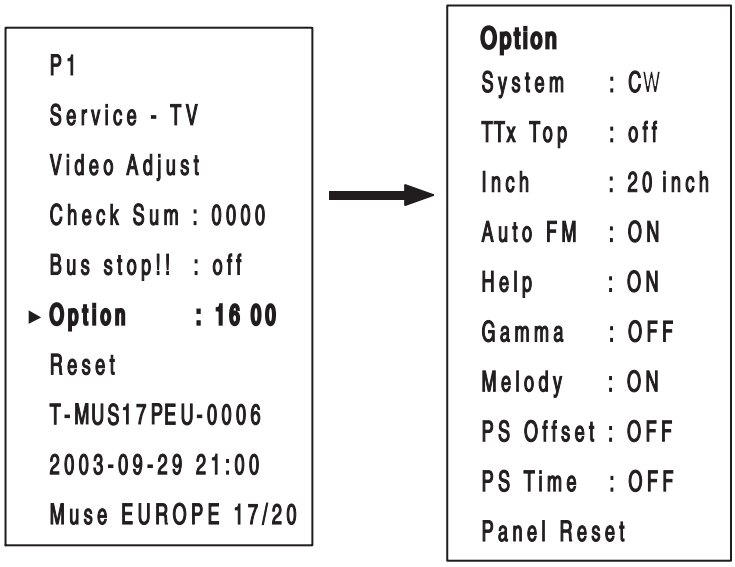
P1
Service - TV
Video Adjust
Check Sum : 0000
Bus stop!! : off
▸ Option : 16 00
Reset
T-MUS17PEU-0006
2003-09-29 21:00
Muse EUROPE 17/20
Option
System : CW
TTx Top : off
Inch : 20 inch
Auto FM : ON
Help : ON
Gamma : OFF
Melody : ON
PS Offset : OFF
PS Time : OFF
Panel Reset

Memo